

OPERATING INSTRUCTIONS

Wireless Fishing Bite Alarm set B1212

I FEATURES FOR TRANSMITTER

- 8 LEDs for drop/back, speed, setting direction.
- Adjustable Sensitivity, Volume, Tone button.
- 256 Variable code enough to prevent interference from another angler.
- LED Alarming signal with high output speaker.
- High visibility LED latching about 30 seconds.
- Extra jack for illuminated swinger.
- Separate battery compartment.

II FEATURES FOR RECEIVER

- Over 100m Transmission range.
- 4 different color LED to match 4 different transmitter/alarms.
- On/off, Adjustable Volume, Vibration button.
- Vibration, LED Alarming signal with high output speaker.
- Range self test function.
- Memory Led.
- Night light.
- Separate battery compartment.

III BATTERY


The Bite alarm operates on a 9V battery and the Receive on 3 xAAA1.5V batteries.

Slide out the battery cover at rear of the alarm and insert one piece of 9V battery, ensuring the correct polarity and connection. As the battery is connected you will hear beeps and LED will flash, and then slide back the battery cover into place.

Always have the alarm switched off when replacing or change battery.

Alkaline battery is greatly recommended for maximum battery life.

IV DESCRIPTION

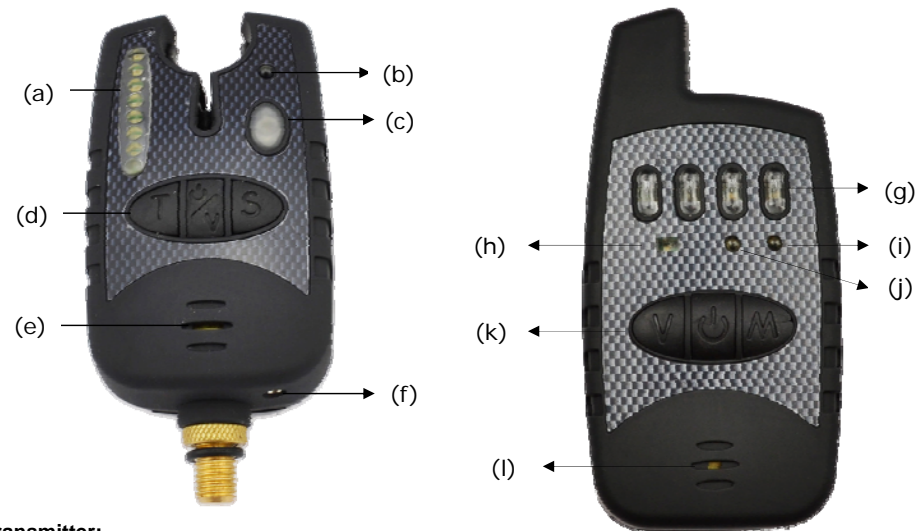

Transmitter:

- (a) 8 LED, direction of drop back with 2 different sounds; direction of setting Sensitivity, Volume, Tone.
- (b) Latching LED with 30 second signal memory.
- (c) Night light and Button to turn on/off 8 LED and Night light.
- (d) Tone, On/off, Volume, Sensitivity button. The middle button to click long time for turn on/off, click short time for volume.
- (e) Output speaker.
- (f) Extra jack for illuminated swinger, fit size 2.5mm plug.

Receiver:

- (g) 4 different colors LED, Red, Yellow, Blue, and Green to match 4 different bite alarm/transmitter.
- (h) Range test LED.
- (i) Latching LED.
- (j) Night light(2 model of flashing and lighting).
- (k) Volume up, On/off and Night light button, Volume down/Vibration.
- (l) Output speaker.

V MATCH WIRELESS TRANSMITTER AND RECEIVER

When the Transmitter and receiver does not match each other, or add more transmitter to match receiver, please find the ID code button on the back of receiver, and follow the step:

- 1). Turn on the transmitter and receiver.
- 2). Keep pressing the "ID CODE" button over 5 seconds, till the receiver beep.
- 3). To roll and actuate the 1st Red LED bite alarm, then the Red indicating LED on the receiver start flashing, and the next near Yellow indicating LED keep lighting, now the Red Led transmitter/bite alarm has been matched with Receiver.
- 4). Then to repeat step 3 to match for 2nd/Yellow, 3rd/Blue, and 4th/Green LED transmitters/bite alarms.
- 5). The match function will be turned off automatically after the last 4th/Green transmitter has been matched.

